



PIRA32 rev. 2006 Serial connection

Crossed cable (also called laplink) is required in most cases for the connection:

RDS encoder
(**male** type connector)

PC computer or satellite receiver
(**male** type connector)

